

S09801/S09802/S09803/S09804

INSTALLATION INSTRUCTIONS SHEET

START FROM HERE




- Make sure power is completely off at the fuse box.
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in clear area.
- Wear gloves at all times during this installation.
- Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference.

Technical Support: 1-844-628-8368


Please Note:

- All Matteo Lighting fixtures come with pre-wired module(s).
- Unless instructed to do so, please do not touch any part of the module(s) as any unnecessary contact with the module could cause permanent damage.


THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED IN A JUNCTION BOX
 CE LUMINAIRE DOIT ÊTRE MONTÉ OU SUPPORTÉ DANS UNE BOÎTE
 DE JONCTION

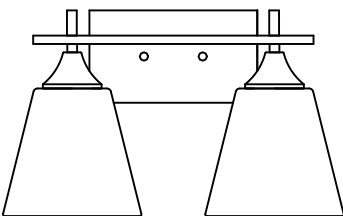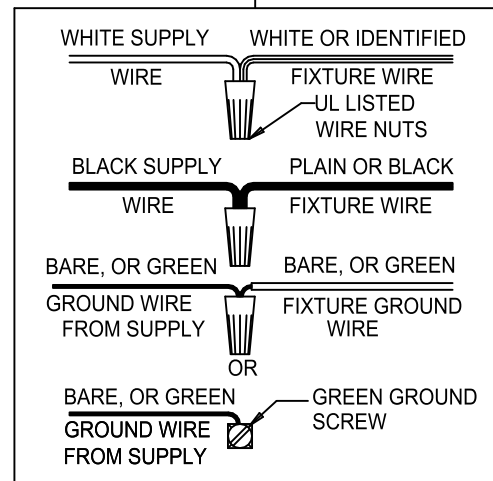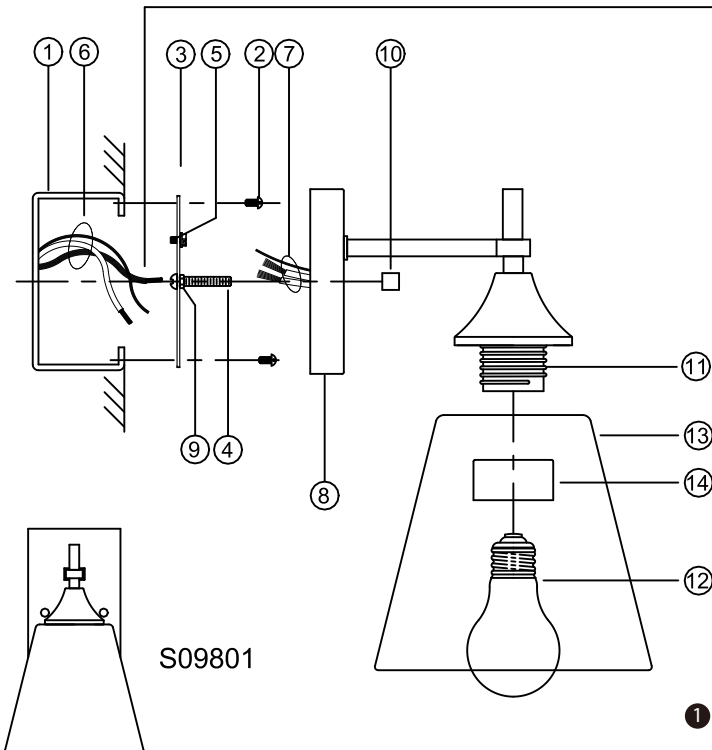

S09802

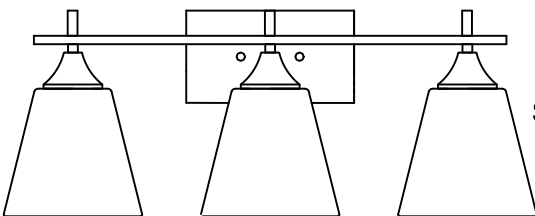

S09803

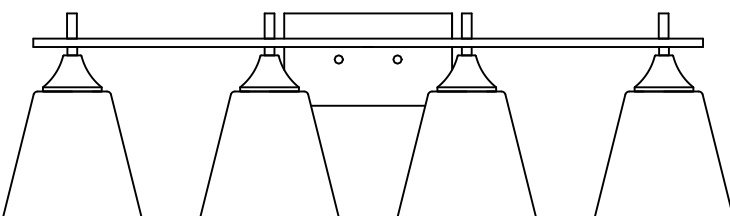

S09804

- 1 Ensure main supply is switched off.
- 2 Lock the ground screw (5) and mounting screws (4) to the round mounting strap (3). Have the mounting screws (2) through the round mounting strap (3), and screws into J-box (1) (not included).
- 3 Connect the wires (6)(7) using wire nuts. Screw mounting screws (4) through backplate (8) and fasten using nuts (10).
- 4 Place the glass (13) on the socket (11) and lock the glass in place with the socket ring (14).
- 5 Install the bulb (12) (not included) into socket (11).